


Note: ① Jumper cap needs to be connected if there is a jumper cap on unit's main board.

② 5-core Electronic expansion valve connect to CN20.

6-core Electronic expansion valve connect to CN19;

Model:	AFKMI-36VRDC1A	
Wiring Diagram		